




<b>DE</b>	Gebrauchsanweisung <b>Multi-Wasserkocher</b>	6	<b>RO</b>	Manual de utilizare <b>Multi-kettle</b>	56
<b>PL</b>	Instrukcja obsługi <b>Czajnik wielozadaniowy</b>	16	<b>BG</b>	Ръководство за употреба <b>Multi-kettle</b>	66
<b>CZ</b>	Návod k obsluze <b>Multi-kettle</b>	26	<b>HR</b>	Uputa za uporabu <b>Multi-kettle</b>	76
<b>SK</b>	Návod na používanie <b>Multi-kettle</b>	36	<b>SL</b>	Navodila za uporabo <b>Multi-kettle</b>	86
<b>HU</b>	Használati utasítás <b>Multi-kettle</b>	46			

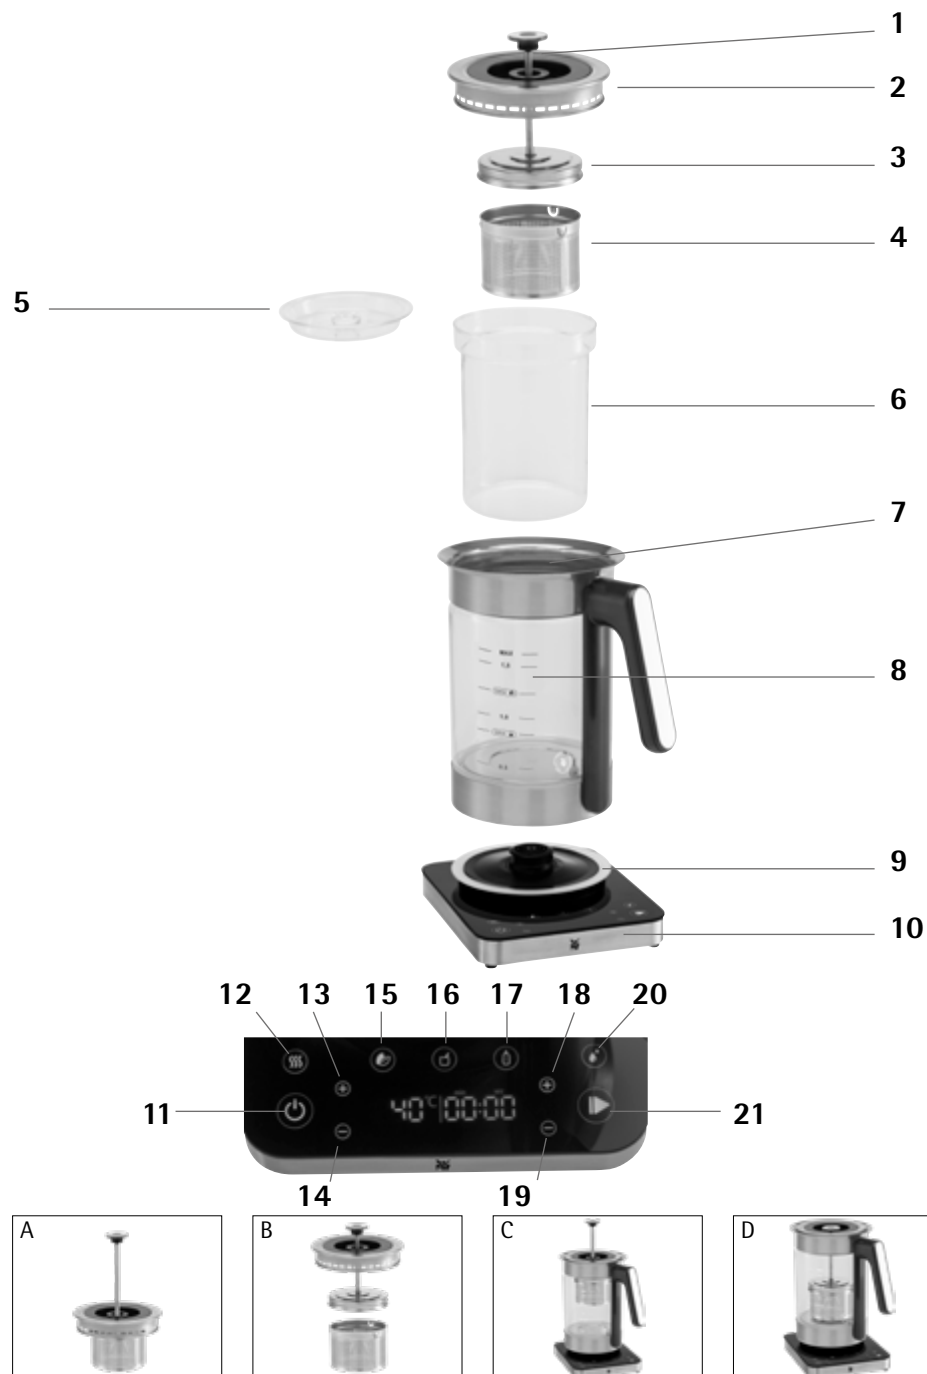

### Budowa (PL)

1. Pokrywka
2. Pokrywa
3. Uchwyt na sitko do herbaty
4. Sitko do herbaty
5. Pokrywa wkładu szklanego
6. Wkład szklany
7. Uszczelka
8. Czajnik szklany
9. Pierścień świetlny LED
10. Podstawa
11. Przycisk włączania/wyłączania
12. Program podgrzewania
13. Przycisk Temperatura plus
14. Przycisk Temperatura minus
15. Program Herbata
16. Program Jogurt
17. Program Żywność dla dzieci
18. Przycisk Czas plus
19. Przycisk Czas minus
20. Program Gotowanie wody
21. Przycisk Start/Stop

### Setup (PL)

1. Cap
2. Lid
3. Tea strainer holder
4. Tea strainer
5. Glass insert cover
6. Glass insert
7. Sealing ring
8. Glass kettle
9. LED light ring
10. Base
11. On/off button
12. Keep warm program
13. Increase temperature button
14. Decrease temperature button
15. Tea program
16. Yoghurt program
17. Babyfood program
18. Increase time button
19. Decrease time button
20. Boil button
21. Start/stop button

### Setup (CZ)

1. Cap
2. Lid
3. Tea strainer holder
4. Tea strainer
5. Glass insert cover
6. Glass insert
7. Sealing ring
8. Glass kettle
9. LED light ring
10. Base
11. On/off button
12. Keep warm program
13. Increase temperature button
14. Decrease temperature button
15. Tea program
16. Yoghurt program
17. Babyfood program
18. Increase time button
19. Decrease time button
20. Boil button
21. Start/stop button

### Setup (SK)

1. Cap
2. Lid
3. Tea strainer holder
4. Tea strainer
5. Glass insert cover
6. Glass insert
7. Sealing ring
8. Glass kettle
9. LED light ring
10. Base
11. On/off button
12. Keep warm program
13. Increase temperature button
14. Decrease temperature button
15. Tea program
16. Yoghurt program
17. Babyfood program
18. Increase time button
19. Decrease time button
20. Boil button
21. Start/stop button

### Setup (HU)

1. Cap
2. Lid
3. Tea strainer holder
4. Tea strainer
5. Glass insert cover
6. Glass insert
7. Sealing ring
8. Glass kettle
9. LED light ring
10. Base
11. On/off button
12. Keep warm program
13. Increase temperature button
14. Decrease temperature button
15. Tea program
16. Yoghurt program
17. Babyfood program
18. Increase time button
19. Decrease time button
20. Boil button
21. Start/stop button

### Setup (RO)

1. Cap
2. Lid
3. Tea strainer holder
4. Tea strainer
5. Glass insert cover
6. Glass insert
7. Sealing ring
8. Glass kettle
9. LED light ring
10. Base
11. On/off button
12. Keep warm program
13. Increase temperature button
14. Decrease temperature button
15. Tea program
16. Yoghurt program
17. Babyfood program
18. Increase time button
19. Decrease time button
20. Boil button
21. Start/stop button

### Setup (BG)

1. Cap
2. Lid
3. Tea strainer holder
4. Tea strainer
5. Glass insert cover
6. Glass insert
7. Sealing ring
8. Glass kettle
9. LED light ring
10. Base
11. On/off button
12. Keep warm program
13. Increase temperature button
14. Decrease temperature button
15. Tea program
16. Yoghurt program
17. Babyfood program
18. Increase time button
19. Decrease time button
20. Boil button
21. Start/stop button

### Setup (HR)

1. Cap
2. Lid
3. Tea strainer holder
4. Tea strainer
5. Glass insert cover
6. Glass insert
7. Sealing ring
8. Glass kettle
9. LED light ring
10. Base
11. On/off button
12. Keep warm program
13. Increase temperature button
14. Decrease temperature button
15. Tea program
16. Yoghurt program
17. Babyfood program
18. Increase time button
19. Decrease time button
20. Boil button
21. Start/stop button

### Setup (SL)

1. Cap
2. Lid
3. Tea strainer holder
4. Tea strainer
5. Glass insert cover
6. Glass insert
7. Sealing ring
8. Glass kettle
9. LED light ring
10. Base
11. On/off button
12. Keep warm program
13. Increase temperature button
14. Decrease temperature button
15. Tea program
16. Yoghurt program
17. Babyfood program
18. Increase time button
19. Decrease time button
20. Boil button
21. Start/stop button