



DE	Gebrauchsanweisung Toaster	4	RO	Manual de utilizare Toaster	34
PL	Instrukcja obsługi Toaster	10	BG	Ръководство за употреба Toaster	40
CZ	Návod k obsluze Toaster	16	HR	Uputa za uporabu Toaster	46
SK	Návod na používanie Toaster	22	SL	Navodila za uporabo Toaster	52
HU	Használati utasítás Toaster	28			



Budowa (PL)

1. Nasadka do bułek
2. Przycisk podnoszenia
3. Panel obsługowy
4. Pierścień świetlny LED
5. Przycisk opiekania 1 kromki
6. Przycisk podgrzewania/dopiekania
7. Przycisk rozmrażania
8. Przycisk nasadki do bułek
9. Przycisk opiekania jednostronnego
10. Wskazanie stopnia zrumienienia
11. Przycisk Plus
12. Przycisk Minus
13. Przycisk Stop
14. Taca na okruchy

Setup (PL)

1. Roll attachment
2. Lift button
3. Control panel
4. LED light ring
5. 1-slice of toast button
6. Warm/retoast button
7. Defrost button
8. Roll attachment button
9. Single sided toasting button
10. Browning level display
11. Plus button
12. Minus button
13. Stop button
14. Crumb tray

Setup (CZ)

1. Roll attachment
2. Lift button
3. Control panel
4. LED light ring
5. 1-slice of toast button
6. Warm/retoast button
7. Defrost button
8. Roll attachment button
9. Single sided toasting button
10. Browning level display
11. Plus button
12. Minus button
13. Stop button
14. Crumb tray

Setup (SK)

1. Roll attachment
2. Lift button
3. Control panel
4. LED light ring
5. 1-slice of toast button
6. Warm/retoast button
7. Defrost button
8. Roll attachment button
9. Single sided toasting button
10. Browning level display
11. Plus button
12. Minus button
13. Stop button
14. Crumb tray

Setup (HU)

1. Roll attachment
2. Lift button
3. Control panel
4. LED light ring
5. 1-slice of toast button
6. Warm/retoast button
7. Defrost button
8. Roll attachment button
9. Single sided toasting button
10. Browning level display
11. Plus button
12. Minus button
13. Stop button
14. Crumb tray

Setup (RO)

1. Roll attachment
2. Lift button
3. Control panel
4. LED light ring
5. 1-slice of toast button
6. Warm/retoast button
7. Defrost button
8. Roll attachment button

9. Single sided toasting button
10. Browning level display
11. Plus button
12. Minus button
13. Stop button
14. Crumb tray

Setup (BG)

1. Roll attachment
2. Lift button
3. Control panel
4. LED light ring
5. 1-slice of toast button
6. Warm/retoast button
7. Defrost button
8. Roll attachment button
9. Single sided toasting button
10. Browning level display
11. Plus button
12. Minus button
13. Stop button
14. Crumb tray

Setup (HR)

1. Roll attachment
2. Lift button
3. Control panel
4. LED light ring
5. 1-slice of toast button
6. Warm/retoast button
7. Defrost button
8. Roll attachment button
9. Single sided toasting button
10. Browning level display
11. Plus button
12. Minus button
13. Stop button
14. Crumb tray

Setup (SL)

1. Roll attachment
2. Lift button
3. Control panel
4. LED light ring
5. 1-slice of toast button
6. Warm/retoast button
7. Defrost button
8. Roll attachment button
9. Single sided toasting button
10. Browning level display
11. Plus button
12. Minus button
13. Stop button
14. Crumb tray